

# ST-B10 OPOS Driver Installer Procedure Manual

**TOSHIBA TEC CORPORATION**

First Edition:	February 5, 2010
Second Edition:	March 8, 2010

---

<b>1. Introduction .....</b>	<b>2</b>
<b>2. Installation .....</b>	<b>3</b>
2.1 Starting the installer .....	3
2.2 Driver selection.....	4
2.3 Setup of Driver.....	4
2.4 Exiting from the installer .....	5
<b>3. Uninstallation .....</b>	<b>6</b>
3.1 Starting the uninstaller.....	6
3.2 Uninstall drivers .....	7
<b>4. Precautions .....</b>	<b>7</b>

## 1. Introduction

This document "ST-B10 OPOS Driver Installer Manual" is the manual to install TEC OPOS Driver used in TEC OPOS Control.

TEC OPOS Driver can install the following drivers.

- TEC Keyboard modules (\*1)
- CashDrawer driver
- Watchdog timer driver
- Sensor driver

Drivers installed by this installer will be used by TEC OPOS Control and not used by itself.

OPOS Driver is offered, as Device driver of TEC POS terminal. It isn't possible to install that to PC.

\*1. There are two interfaces, which are PS/2 and USB. They can't be used at the same time. Uninstall the driver to switch interface.

## Caution

It is prohibited to copy or transfer a part or whole of this manual without the consent.

The content of this manual is subject to change without notice in the future.

\*Microsoft, Windows, Windows NT, Windows 2000 and Windows XP are trade marks of Microsoft Corporation in the U.S. and other countries.

\*The official name of Windows is Microsoft Windows Operating System.

## 2. Installation

### 2.1 Starting the installer

1. Run “ST-B10\_Driver\_Installer\_Vxxx.xxx.exe” file from “DRVST-B10” folder in “DRV” folder.
2. The description about the installer will be displayed after the startup of the installer. Press “Next” button to proceed.



## 2.2 Driver selection

1. The screen to select the driver to be installed will be displayed.
2. Select the driver to be installed.
3. Press "Browse" button to change the installation target and select the directory in the directory selection screen.
4. Press "Next" button after the selection of the driver and the installation target to start installation.

### Caution:

When you install keyboard driver, you must connect PS2 mouse.




## 2.3 Setup of Driver

The following screen will be displayed several times (the number of selected drivers).



## 2.4 Exiting from the installer


Press “Finish” button to exit from installation.

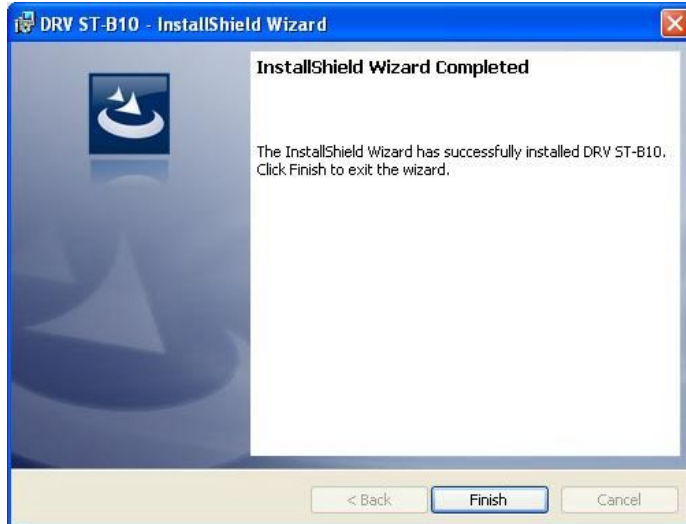


### 3. Uninstallation

#### 3.1 Starting the uninstaller

1. Open "Control Panel" from "Setting" of the "start" menu.
2. Open "Add/Remove Programs" from the control panel.
3. Select "TEC OPOS Driver " in the "Install/Uninstall" and press "Remove" button.

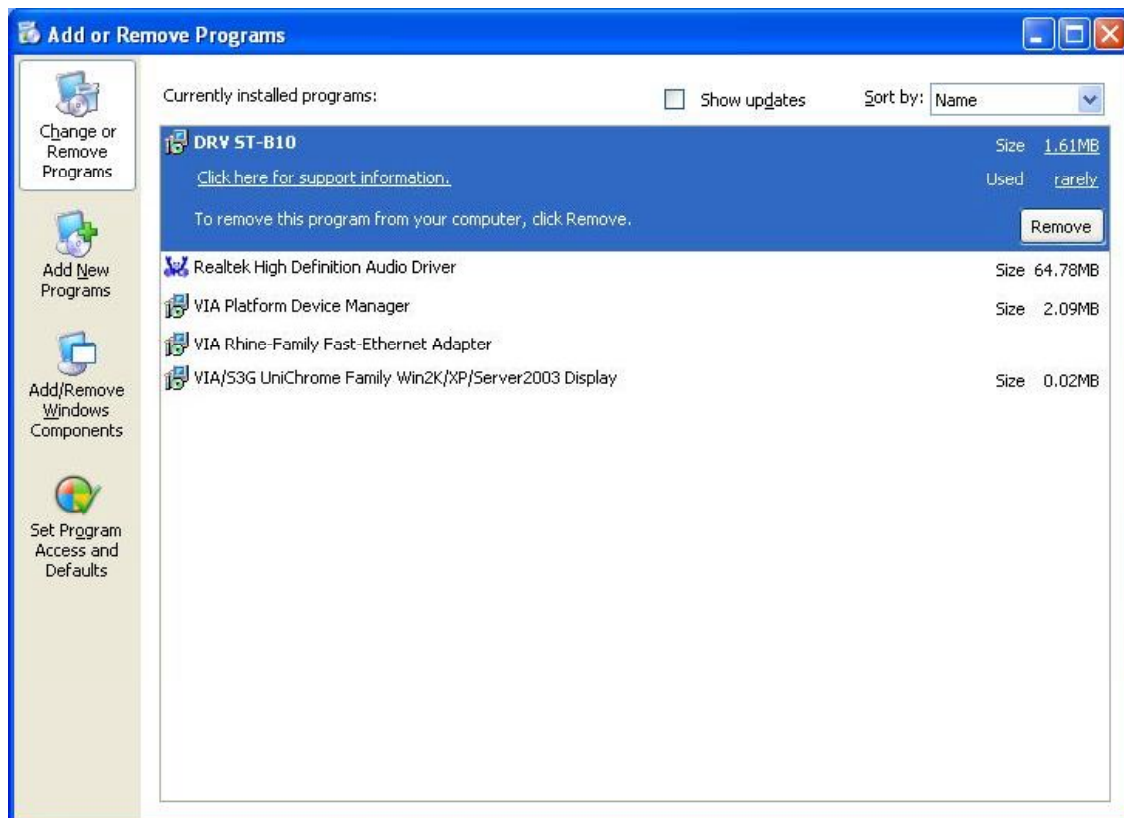


4. Click "Yes" button to start uninstall.

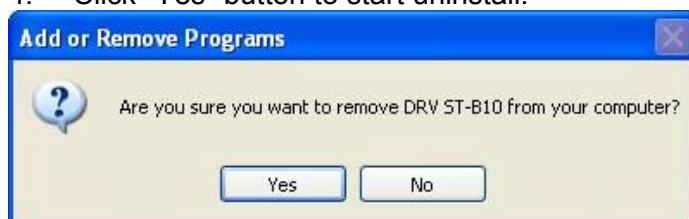

### 3.2 Uninstall drivers

1. Open "Device Manager".
2. Right Click on the particular device that you want to uninstall then select "uninstall".

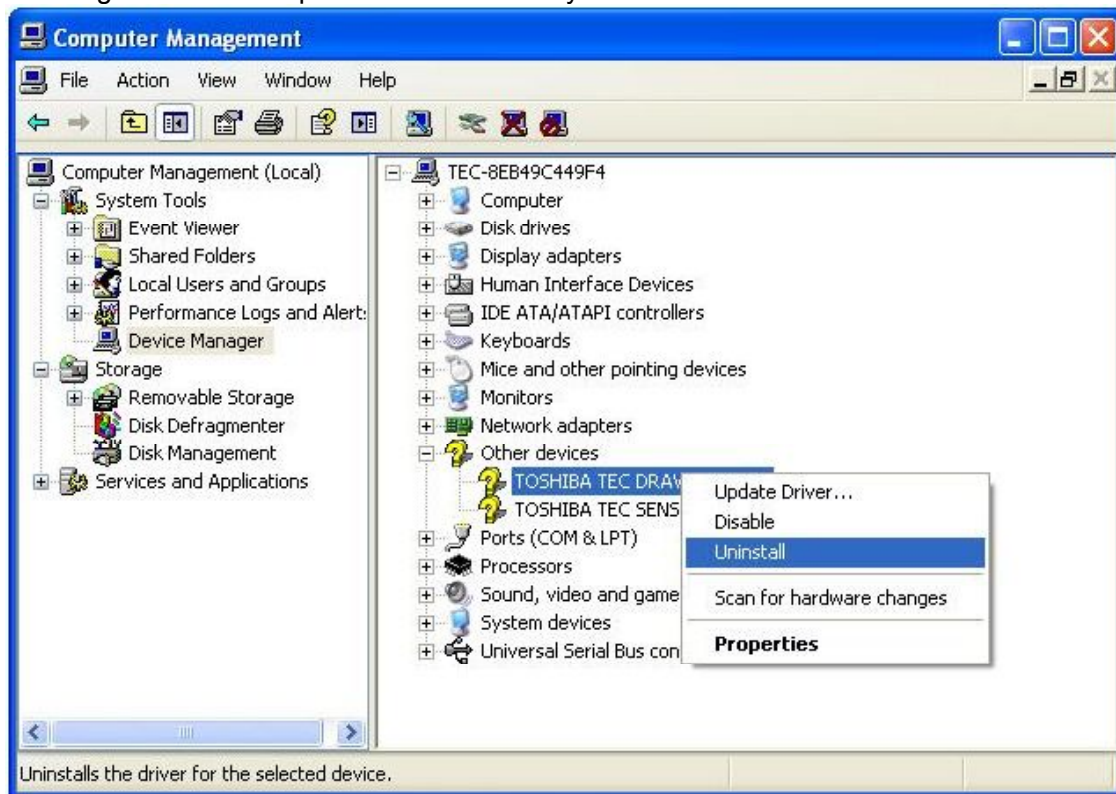

### 4. Precautions

Installation work must be done by logging into the system by the system manager's account.