


TOSHIBA

Barcode Printer

Owner's Manual

BV420D-GL02-QM-S

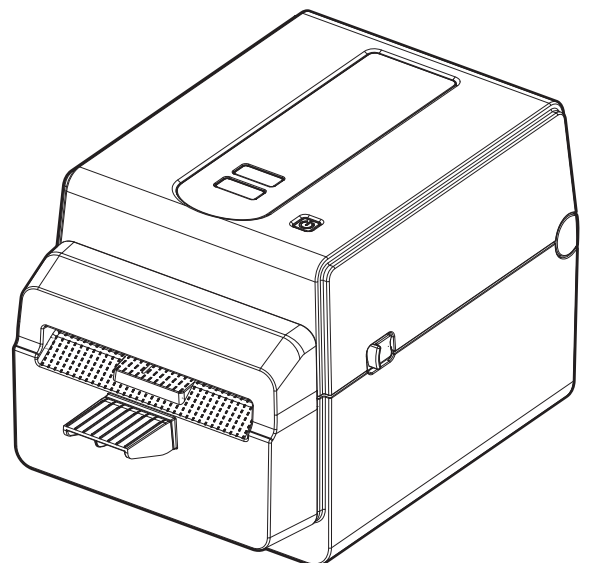

Preface

Thank you for purchasing our product.

To keep the product in its best condition, keep this manual handy and use it whenever necessary.

■ Important notices about this manual

- This product is designed for commercial usage and is not consumer product.
- This manual may not be copied in whole or in part without prior written permission of Toshiba Tec Corporation.
- The contents of this manual may be changed without notification.
Contact your authorized Toshiba Tec Corporation representative for the latest version of the manual.
- Refer to your local authorized service representative with regard to any queries you may have in this manual.
- Windows is a registered trademark of Microsoft Corporation.

■ Importers and Manufacturer

Importer (For Turkey)

BOER BILISIM SANAYI VE TICARET ANONIM SIRKETI BCP
Yukari Dudullu, Tavukcuyolu Cad. Demirturk Sok No: 8A 34775,
Umraniye-Istanbul, Turkey

Manufacturer

Toshiba Tec Corporation
1-11-1, Osaki, Shinagawa-ku, Tokyo, 141-8562, Japan

CONTENTS

Preface.....	1
Important notices about this manual	1
Importers and Manufacturer	1
1. Product Overview	3
Introduction	3
Features	3
Unpacking	3
2. Description of Components	5
Front and rear views	5
Interior	6
3. Accessories	7
4. Operation Panel Functions	8
5. Printer Setup.....	9
Precautions	9
Setup procedure of the printer	10
6. Connecting the Cables.....	11
7. Connecting the AC Adapter and Power Cable	12
8. Turning the Printer On and Off	13
How to turn the power on	13
How to turn the power off	13
9. Opening and Closing the Top Cover	14
To open the top cover	14
To close the top cover	14
10. Loading the Media.....	15
Loading the media roll	15
11. Maintenance.....	17
Print head	17
Media sensors	18
Platen roller	18
Media housing	19
Cutter	19
How to store and handle the media	22
12. Troubleshooting	23
Troubleshooting	23
Status lamp	24
Removing jammed media	25
13. Printer Specifications.....	26
Printer	26
Options	27
14. Media Specifications	28
Media	28

1. Product Overview

■ Introduction

Thank you for purchasing our barcode printer. This Owner’s Manual contains valuable information such as the general setup and how to confirm the printer’s operation using test prints. Read this carefully to help you to gain maximum performance and life from your printer. Be sure to keep this manual close at hand for daily reference. For further information concerning this manual, contact your Toshiba Tec Corporation representative.

■ Features

This printer has the following features:

Interfaces	A USB port and Ethernet support interface are embedded in this printer as standard. Wireless LAN, Bluetooth and serial interface (RS-232C) can also be embedded as an option.
Easy to use	The printer mechanism is designed to allow simple operation and easy access to maintenance.
Full range of options	The following optional devices can also be installed in this printer. <ul style="list-style-type: none">• Wireless LAN interface• Bluetooth interface• Serial (RS-232C) interface• AC adapter cover

■ Unpacking

- 1 **Unpack the printer.**
- 2 **Check that there are no scratches on the printer or any other damage to it.**





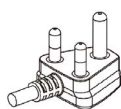
Note

Toshiba Tec Corporation shall have no liability for any damage or anything similar sustained during transportation.
- 3 **Keep the carton and internal packing materials for future transportation of the printer.**

Power cable instructions

1. For use with 100 – 125 Vac mains power supply, select a power cable rated Min. 125V, 10A.
2. For use with 200 – 240 Vac mains power supply, select a power cable rated Min. 250V, 10A.
3. Select a power cable with the length of 2 m or less.
4. The power cable plug connected to the AC adapter must be able to be inserted into an ICE-320-C14 inlet. Refer to the following figure for the shape.

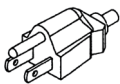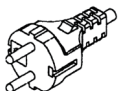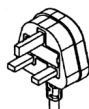


Country/Region	North America	Europe	United Kingdom	Australia	South Africa
Power cable Rated (Min.) Type	125V, 10A SVT	250V H05VV-F	250V H05VV-F	250V AS3191 approved, Light or Ordinary Duty type	250V, 6A H05VV
Conductor size (Min.)	No. 3/18AWG	3 x 0.75 mm ²	3 x 0.75 mm ²	3 x 0.75 mm ²	3 x 0.75 mm ²
Plug configuration (locally approved type)					
Rated (Min.)	125V, 10A	250V, 10A	250V * ¹	250V * ¹	250V * ¹

*1 At least, 125% of the rated current of the product

2. Description of Components

The name of the components in this section is used in the following chapters.



■ Front and rear views



⚠ CAUTION


MECHANICAL HAZARD

To avoid injury, be careful not to trap your fingers in the paper slot while opening or closing the top cover.

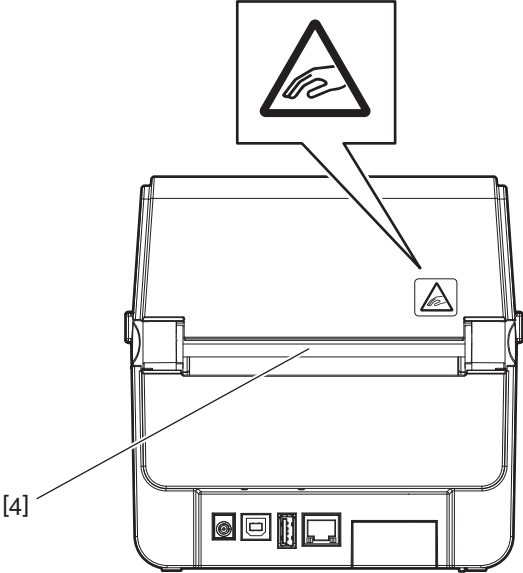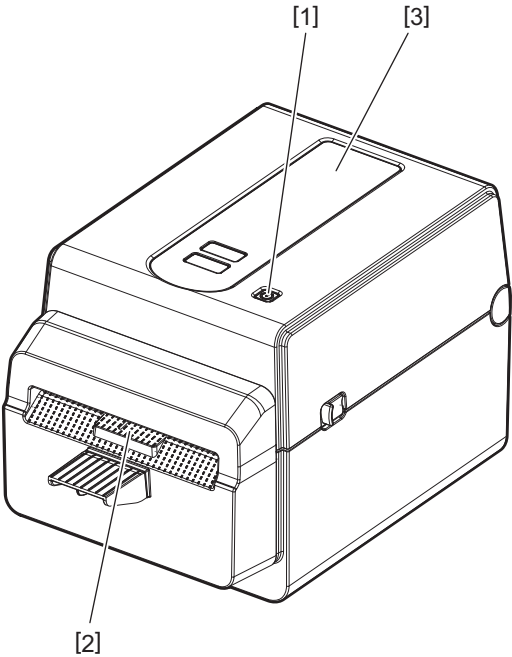

No.	Part Name	No.	Part Name
1	[POWER] button	3	Media view window
2	Media outlet	4	Paper slot

Note

For the interface section at the rear side, refer to  P.11 “6. Connecting the Cables”.


■ Interior



⚠ WARNING


HOT SURFACE

You may get burned.
Do not touch the print head or around it immediately after printing.
The print head will become very hot during printing.

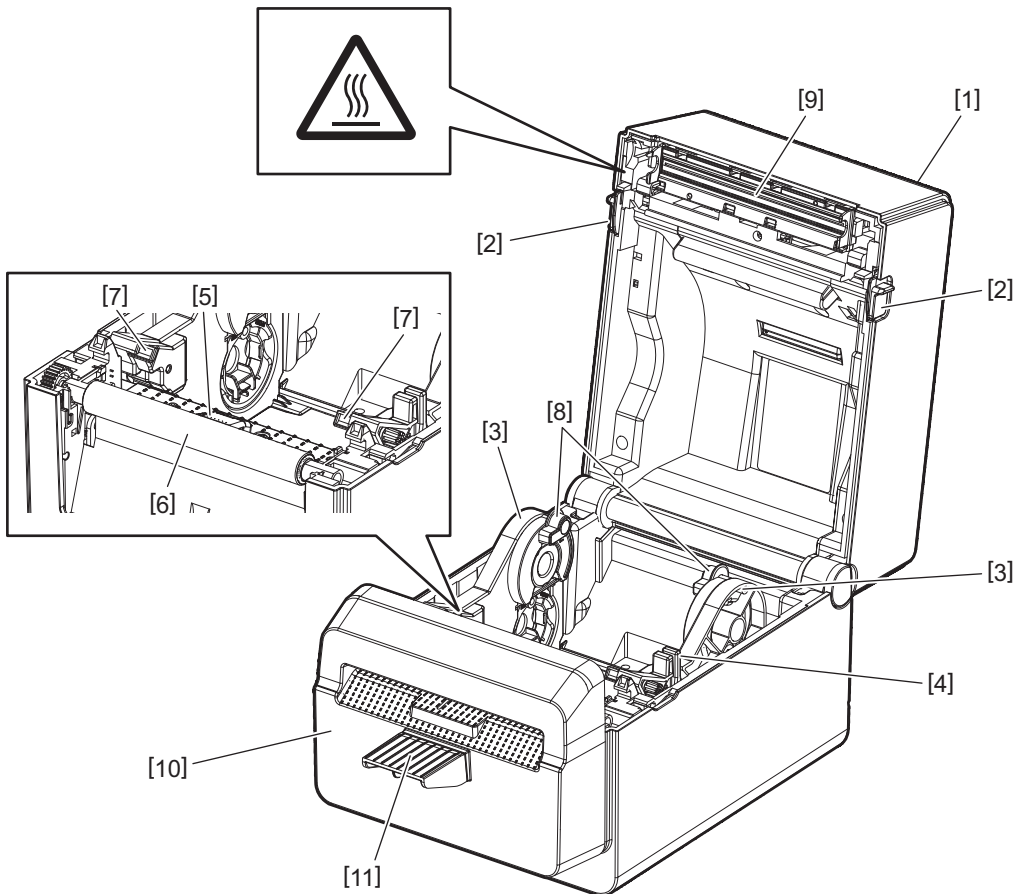

No.	Part Name	No.	Part Name
1	Top cover	6	Platen roller
2	Lock release portions (left, right)	7	Media guides (left, right)
3	Media roll holder	8	Core holders (left, right)
4	Holder lock lever	9	Print head
5	Media sensors	10	Cutter unit
		11	Cutter tray


3. Accessories

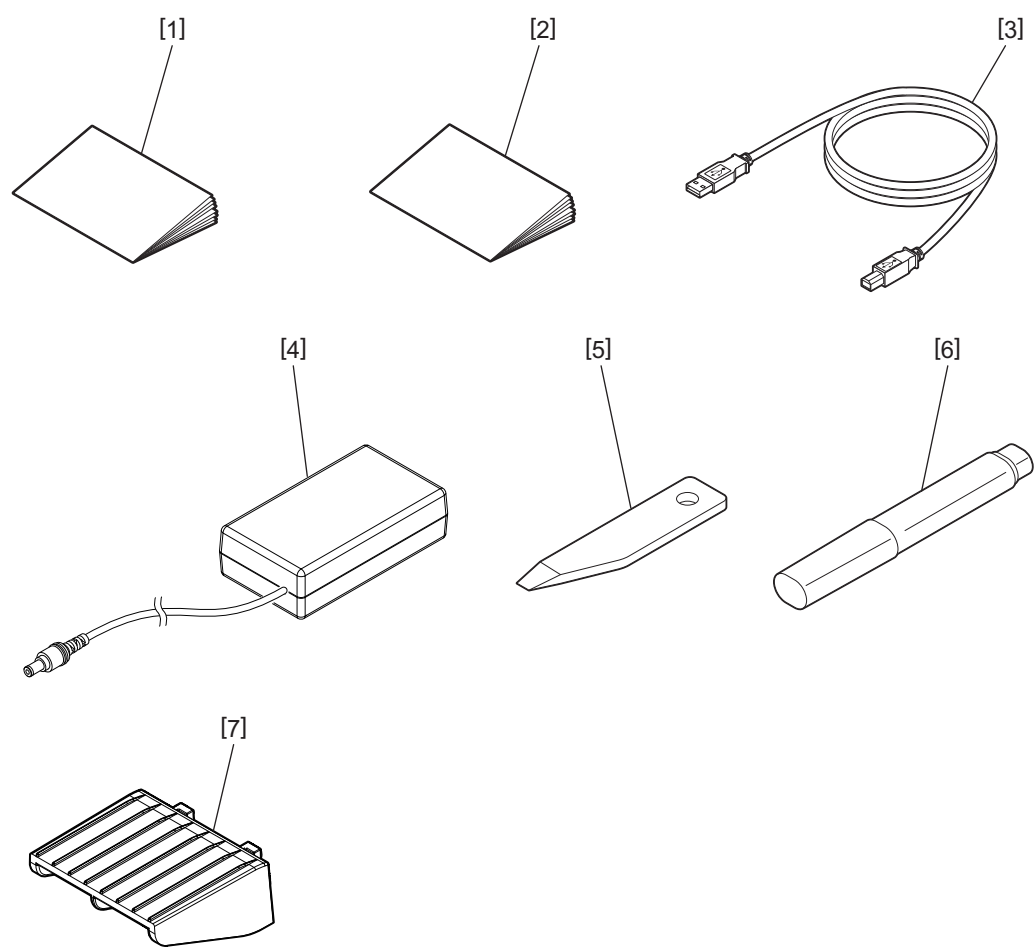

No.	Part Name	No.	Part Name
1	QSG	5	Scraper
2	Safety Information	6	Cleaner pen
3	USB cable	7	Cutter tray
4	AC adapter		

4. Operation Panel Functions

The buttons on the operation panel are used to operate and set the printer.

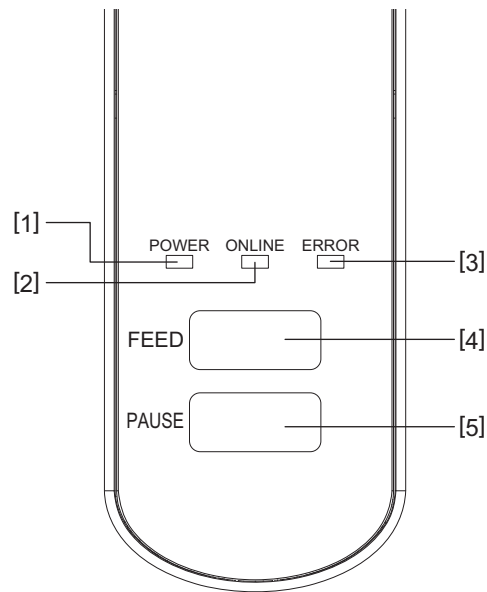

No.	Name	Function/Usage
1	POWER lamp	Lights when the power is turned on.
2	ONLINE lamp	<ul style="list-style-type: none">• Lights when the printer is in the online mode.• Blinks when communicating with a host computer.
3	ERROR lamp	Lights when a communication error occurs, the paper ends or the printer is not operating correctly.
4	[FEED] button	Feeds one sheet of media by pressing this button while the printer is in the online mode.
5	[PAUSE] button	<ul style="list-style-type: none">• Pauses printing.• Resets the printer when paused or when an error occurs.

Note

When the ERROR lamp lights, an error has occurred in the printer.
For details, refer to P.23 “12. Troubleshooting”.

5. Printer Setup

This chapter explains the procedures necessary to set up the printer prior to its operation.

WARNING

Avoid using the printer in the locations where it is subjected to intense light (e.g.: direct sunlight or desk light). Such light may affect the sensors of the printer, causing malfunctions.

Precautions

To insure the best operating environment, as well as to assure the safety of the operator and the printer, be sure to observe the following precautions.

- Operate the printer on a stable and level surface in a location free from excessive humidity, high temperature, dust, vibration and direct sunlight.
- Keep the work environment static free. Static discharges can cause damage to delicate internal components.
- Make sure that the printer is connected to a clean AC power source and that no other high voltage devices that may cause line noise interference are connected to the same power source.
- Ensure that the printer is connected only to an AC power source that has a proper ground (earth) connection.
- Do not operate the printer with the cover open. Be careful not to allow your fingers or any articles of clothing to get caught in any of the moving parts of the printer.
- Before working on the inside of the printer or cleaning it, be sure to turn off the power of the printer and remove the AC adapter from it.
- For best results and a longer printer life, use only Toshiba Tec Corporation recommended media. (Refer to the Supply Manual.)
- Store the media in accordance with “How to store and handle the media” in this manual.
- This printer mechanism contains high voltage components. Therefore, you should never remove any of the covers of the printer as you may get an electric shock.
Additionally, the printer contains many delicate components. They may be damaged if accessed by unauthorized personnel.
- Clean the outside of the printer with a clean dry cloth or a clean cloth slightly dampened with a mild detergent solution.
- The print head and its peripherals will become very hot during printing. You may get burnt if you touch it in such a condition. Therefore, wait until the printer has cooled down sufficiently before cleaning.
Use only the Toshiba Tec Corporation recommended print head cleaner to clean the print head.
- Do not turn off the printer or remove the power plug while printing or while any lamp is blinking.
- The printer shall be installed near the socket outlet and shall be set so that the power plug can be removed from the socket outlet easily.
- The power plug should be removed from the socket outlet once a year at least and cleaned around the prongs. Accumulating dust and dirt could cause a fire due to the heat released by electrical leakage.
- When the printer will not be used for a long time, pull the lock release lever toward you to unlock the top cover so that no pressure is applied to the label.

■ Setup procedure of the printer

This section explains the procedures necessary to set up the printer properly.

⚠ CAUTION

- To make a communication with a host computer, an RS-232C, Ethernet or USB cable is required.
 - RS-232C cable: 9 pins (Do not use a null modem cable.)
 - Ethernet cable: 10/100 base
 - USB cable: V2.0 (Hi-Speed)
- The use of a Windows driver will enable printing from Windows applications.
The printer can also be controlled with its own programming commands. For details, contact your Toshiba Tec representative.

1 Unpack the printer and its accessories from the carton.

2 Place the printer in the location where it is used.

To correctly use and install the printer, see the co-packed "Safety Precautions".


3 Check that the printer is turned off.

Refer to  P.13 "8. Turning the Printer On and Off".


4 Connect the printer to the host computer or network using an RS-232C, Ethernet or USB cable.

Refer to  P.11 "6. Connecting the Cables".

5 Connect the AC adapter to the printer and plug the power cable into a properly grounded outlet.

Refer to  P.12 "7. Connecting the AC Adapter and Power Cable".

6 Load the media.

Refer to  P.15 "10. Loading the Media".

7 Install the printer driver in the host computer.

Refer to https://www.toshibatec.com/download_overseas/printer/printer_driver/.

8 Turn the power on.


Refer to  P.13 "8. Turning the Printer On and Off".

6. Connecting the Cables

This chapter explains on how to connect the communication cables to the printer from a host computer or other devices. Three types of cables can be used in this printer.

⚠ CAUTION


- Be sure to connect the serial cable while the printer and the host computer are turned off.
- If an attempt is made to connect the cable while the printer and the host computer are turned on, this may cause damage, an electric shock or a short circuit.

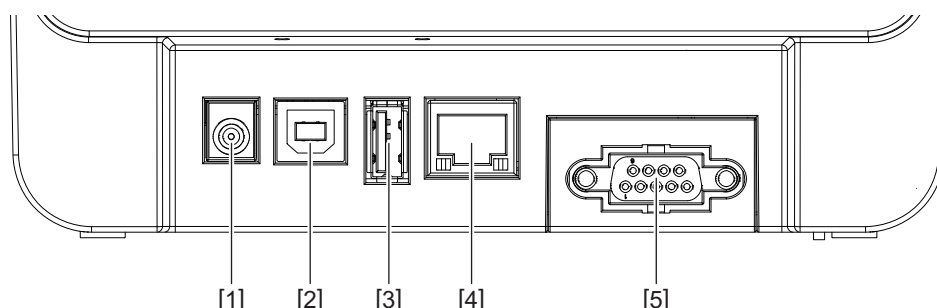


No.	Part Name	Usage
1	Power jack	This is used to connect the AC adapter.
2	USB interface for connecting a host computer	This is used to connect one of the USB ports of a host computer with a USB cable. Use a USB cable which has a type B plug attached to one of its sides.
3	USB interface for connecting a USB memory	This is used to connect another device with a USB cable. e.g. the firmware downloading, the flash ROM expansion by a USB memory etc. and not for user.
4	Ethernet interface	This is used to connect a network with an Ethernet cable. In addition, direct connection to the Ethernet port of a host computer is possible. <div>Note</div> <ul style="list-style-type: none">• Be sure to use an Ethernet cable complying with the standard. 10BASE-T: Category 3 or greater 100BASE-TX: Category 5 or greater Cable length: Up to 100 m segment length• If a communication error caused by radio wave interference on the cable has occurred, use a shield cable (STP).
5	Serial interface (RS-232C) (Option)	This is used to connect one of the COM ports of a host computer with a serial cable.

7. Connecting the AC Adapter and Power Cable


- 1 Plug the power cable [1] into the AC adapter [2].**

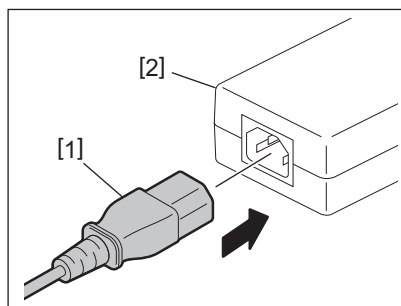

Note

If a power cord is not provided with this printer, please purchase the correct one referring to  P.4 “When purchasing the power cable”.

- 2 Plug the AC adapter connector [3] into the power jack [4] at the rear side of the printer.**

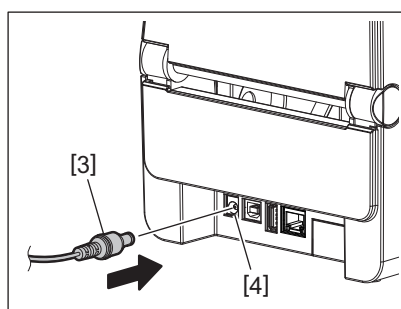

- 3 Plug the other end of the power cable into a grounded outlet.**

8. Turning the Printer On and Off

CAUTION

- Press the [POWER] button of the printer to turn it on or off.
Do not plug in or unplug the power cable when you are turning the printer on or off as this may cause a fire, an electric shock or damage to the printer.
- Do not turn the power off during printing as this may cause a media jam or damage to the printer.
- Do not turn the power off while the ONLINE lamp is blinking as this may cause loss or corruption of the data being downloaded.

■ How to turn the power on

Note


If the printer is connected to a host computer, it is recommended to turn the printer on first and then the host computer.

1 While the printer is turned off, press the [POWER] button for a few seconds.

2 The POWER lamp on the control panel lights.

If the printer is connected to a host computer, the ONLINE lamp lights.

Note

- Approx. 30 seconds will be required to complete the loading of Open Type fonts after the power is turned on. The ONLINE lamp starts blinking (interval: 0.5 sec.) after 10 seconds have passed after the power has come on. When the loading of Open Type fonts is completed, the ONLINE lamp status is changed to lit. While the ONLINE lamp is blinking, print data can be received; however, printing of files including Open Type fonts is not possible.
- When the ERROR lamp lights, an error has occurred in the printer.
For details, refer to  P.23 “12. Troubleshooting”.

■ How to turn the power off

Note

If the printer is connected to a host computer, it is recommended to turn the host computer off first and then the printer.

1 Check that the ONLINE lamp on the control panel is lighting (not blinking).


2 Press the [POWER] button for a while. All the lamps will go out and the printer will be turned off.

If the printer is connected to a host computer, check that the ONLINE lamp on the control panel has gone out.

9. Opening and Closing the Top Cover


■ To open the top cover

While pulling the lock release part [1], open the top cover [2].

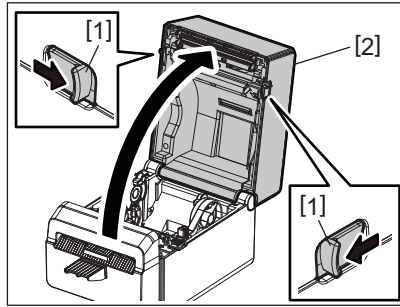

■ To close the top cover

Close the top cover.

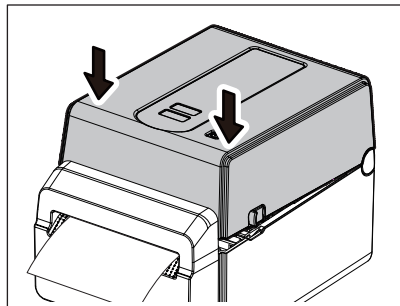

Note

Be sure to close the top cover completely. Otherwise, this may affect the print quality.

10. Loading the Media

This chapter explains how to load the media in the printer. This printer is intended for printing the media roll without liner. Use Toshiba Tec Corporation approved media.

⚠ WARNING

Do not touch the print head or around it immediately after printing.

The print head will become very hot during printing. You may get burnt if you touch it in such a condition.

⚠ CAUTION


- To avoid injury, be careful not to trap your fingers in the paper slot while opening or closing the top cover.
- Do not touch the print head.
Otherwise, some dots may be damaged due to static electricity or other print quality problems.

■ Loading the media roll

1 Open the top cover.

For details, refer to  P.14 “9. Opening and Closing the Top Cover”.

2 While holding the holder lock lever [1], slide the media holder [2] toward the exterior.

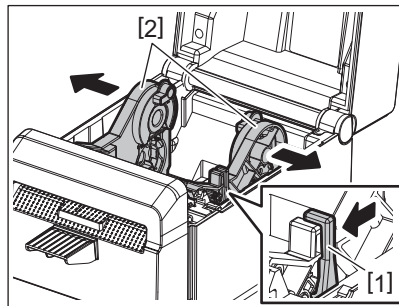


Note

- Be sure to perform calibration of the media sensors by using BCP Setting Tool whenever you change the media type.
- The available media size to be set in the printer is as below.
 - Roll diameter: Max. 107 mm (4.2")
 - Inner core diameter: 38.1 mm (1.5")
- Use the outside wound type media and load it so that the print side faces up.


3 Place the media roll.

Set the media roll [1] between the media roll holders [2] while its printing surface comes upward.

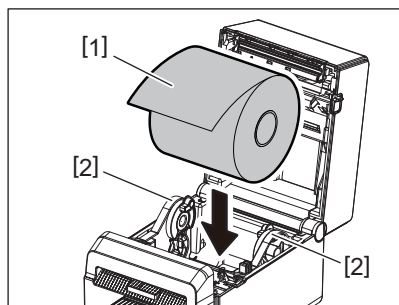


4 Align the media guides [1] to the media roll width.

While holding the holder lock lever [2], slide the media holder [3] to fix the media roll securely.

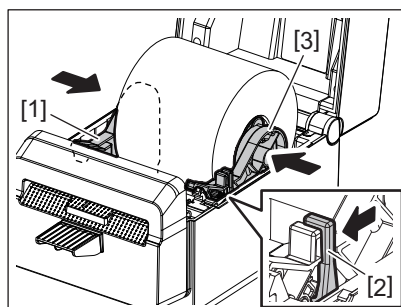

Note

- Check that the printer printing surface has come upward.
- Cut the edge of the media with scissors.

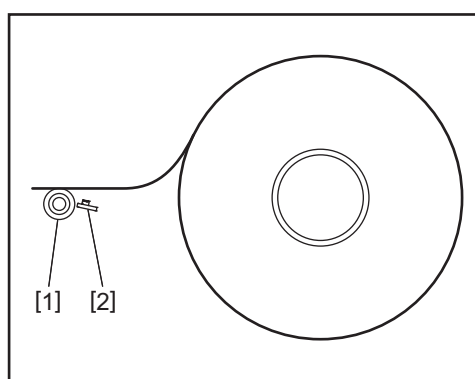


[1] Platen roller

[2] Paper sensor (Reflective sensor)

5 Load the media.

Pass the media through the media guides [1] and pull it until it reaches the front of the printer.

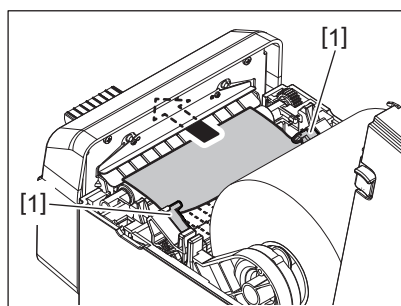

Note

Do not squeeze the media too much with the media guides. Otherwise, the media will bend and this may cause jamming or misfeeding.

6 Close the top cover.

For details, refer to  P.14 “9. Opening and Closing the Top Cover”.

Note

Be sure to close the top cover completely. Otherwise, this may affect the print quality.

7 Press the [FEED] button.

Check that the media is fed correctly.

11. Maintenance

This chapter explains the routine maintenance procedures.

To ensure the continuous high quality operation of your printer, regularly perform the maintenance routines or every time when the media is changed.

When the printer is intensively used (high throughput), perform the maintenance on a daily basis. When the printer is not intensively used, perform these maintenance on a weekly basis.

⚠ WARNING


- Before cleaning the printer and its inside, be sure to turn off the power of the printer and unplug the power plug from the outlet for safety.
- To avoid injury, be careful not to trap your fingers in the paper slot while opening or closing the top cover. You may injure yourself.
- The print head will become very hot during printing. Therefore, do not touch the print head or its vicinity immediately after printing. You may get burnt if you touch it in such a condition.
- Do not pour water directly onto the printer. This may cause damage, an electric shock or a fire.

⚠ CAUTION

- Do not allow any hard objects to touch the print head or platen roller. This may cause damage to them.
- Do not use any volatile solvents including thinner and benzene. This may cause discoloration of the cover, print failure or printer damage.
- Do not touch the print head with your bare hands. This may cause static electricity and thus may damage the print head.

■ Print head

- 1 Turn the power off and open the top cover.**
- 2 Clean the print head with the cleaner pen (accessory), cotton swab or soft cloth slightly moistened with ethyl alcohol.**

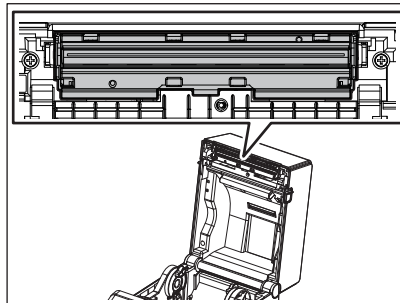


Note

Clean the print head every one label roll or at the end of day.

■ Media sensors

- 1 Turn the power off and open the top cover.**
- 2 Wipe the media sensors with a soft cloth or a cotton swab slightly moistened with absolute (pure) ethyl alcohol.**


To remove dust or paper particles, wipe the media sensors with a dry soft cloth.

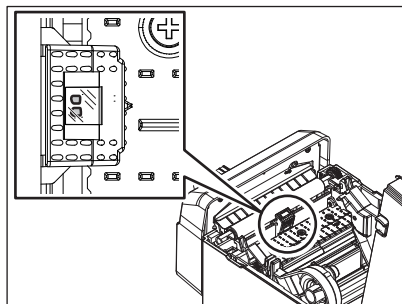

■ Platen roller

- 1 Turn the power off and unplug the power plug from the outlet.**
- 2 Fully open the top cover.**
- 3 Wipe off the dirt on the platen roller with a soft cloth applying a small amount of absolute (pure) ethyl alcohol.**

Clean the platen roller while rotating it one turn by hand.

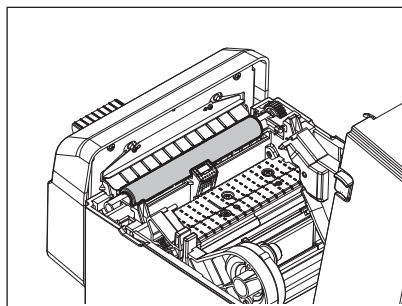


⚠ CAUTION

- Clean the platen roller every one media roll that is printed.
- Do not rub the platen roller strongly. Doing so may cause damage to the uneven platen roller surface.
- Do not damage the platen roller with sharp objects.
- Do not use chemicals other than absolute (pure) ethyl alcohol, such as thinner or benzene. Doing so may cause poor printing, discoloration or alteration.

■ Media housing

- 1 Turn the power off and open the top cover.**
- 2 Wipe the media housing with a dry soft cloth.**
If dirt still adheres, wipe it off with a soft cloth slightly moistened with mild detergent solution.

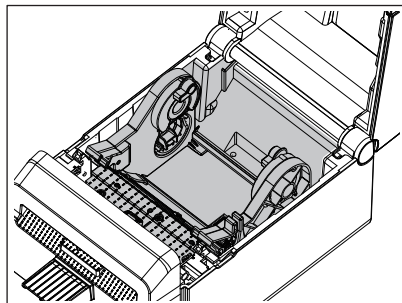

■ Cutter


⚠ WARNING

Be careful not to touch the cutter blade during the cleaning since it is very sharp.
You may injure yourself.


Note

Clean the cutter every one label roll or at the end of day.


- 1 Turn the power off.**
- 2 Wipe the cutter outlet [1] and the cutter tray [2] with a dry soft cloth.**

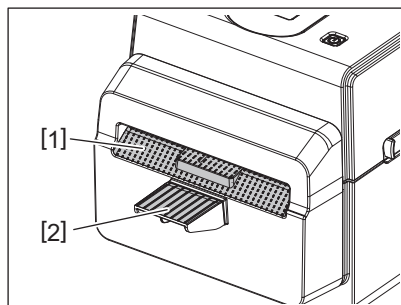


- 3 Open the top cover.**
- 4 Remove the cutter tray [2] from the cutter unit [1].**

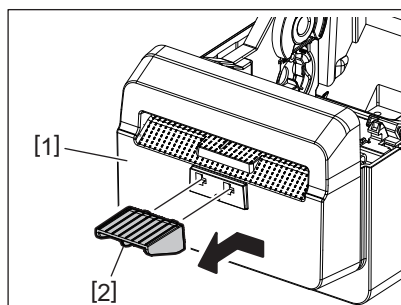


-
- 5** Lift up the cutter unit [3] from the printer to take it off.

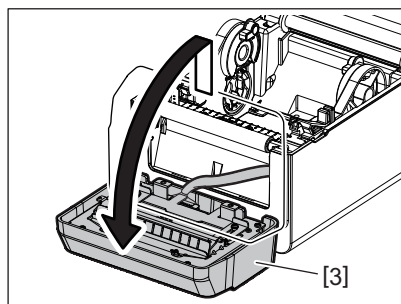


- 6** Slide the two levers as indicated by the arrows.

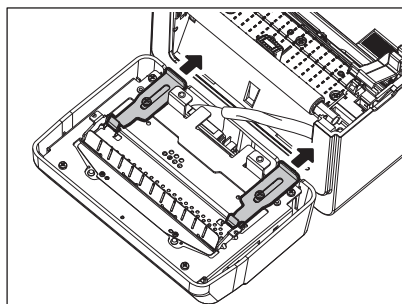


- 7** Open the paper guide [4].

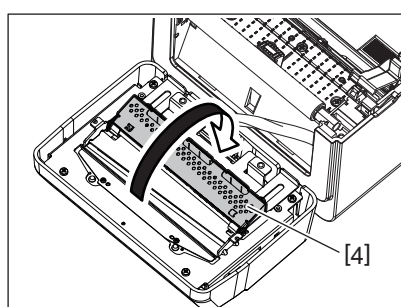

- 8** Use the scraper (accessory) [5] to remove adhesive residue from the cutter blade.

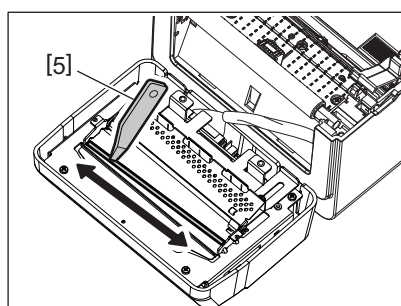


- 9** Use the cleaner pen (accessory) [6] to clean the blade surface.

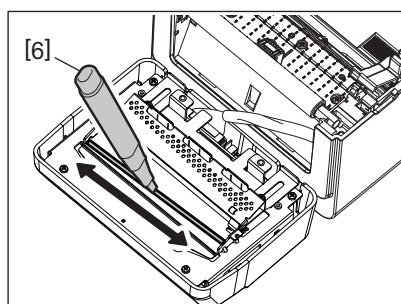


10 Close the paper guide [4].

WARNING


When closing the paper guide, be careful not to drop anything metal or any other foreign objects, such as a paper clip, into the guide. This may cause the printer to malfunction.

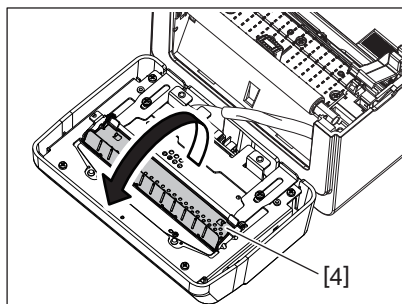

11 Return the 2 levers to their original position.

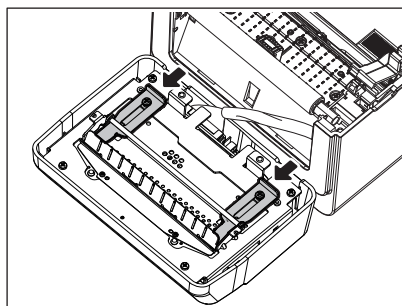


12 Push the cutter harness [5] into the printer.

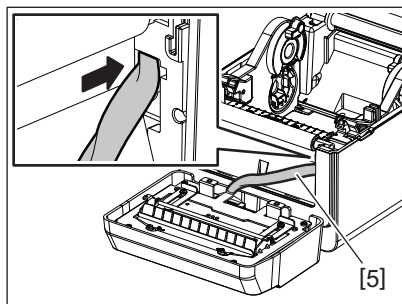

13 Attach the cutter unit [3] to the designated position.


Confirm that the two lower hooks [6] and the two upper hooks [7] of the cutter unit are inserted into the slits indicated by the arrows.

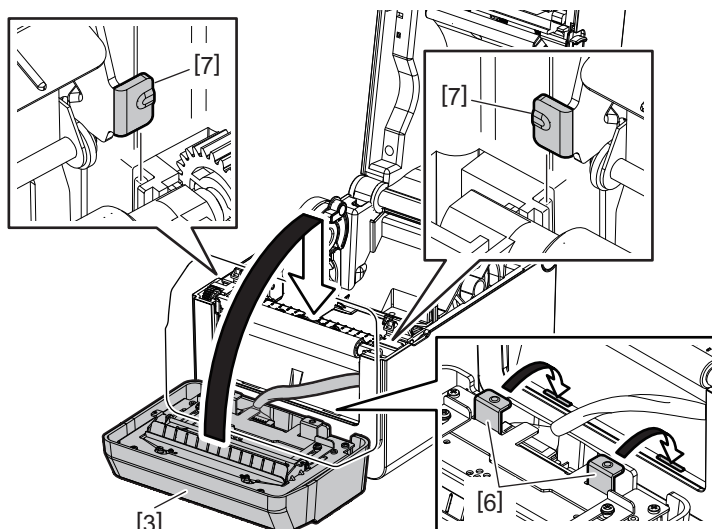

⚠ CAUTION

Confirm that the cutter unit is attached correctly.
Otherwise, problems will occur in printing or cutting.

14 Attach the cutter tray [2] to the cutter unit.

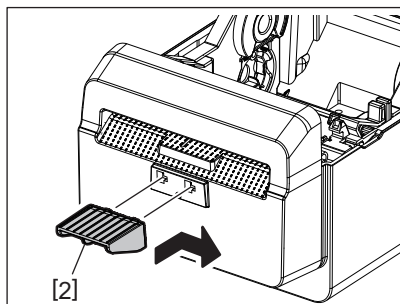

■ How to store and handle the media

⚠ CAUTION

Be sure to carefully review and understand the Supply Manual. Use only media which meets the specified requirements. Use of non-specified media may shorten the head life and result in problems concerning barcode readability or print quality. All media should be handled with care to avoid any damage to the media or the printer. Read the guidelines in this section carefully.

- Do not store media for longer than the manufacturer's recommended shelf life.
- Store the media on the flat end. Do not store them on the curved sides as this might flatten that side causing an erratic media advance and poor print quality.
- Store the media in plastic bags and always reseal after opening. Unprotected media can get dirty and the extra abrasion from the dust and dirt particles will shorten the print head life.
- Store the media in a cool, dry place. Avoid areas where they would be exposed to direct sunlight, high temperatures, high humidity, dust or gas.
- The thermal paper used for direct thermal printing must not have specifications which exceed Na⁺ 800 ppm, K⁺ 250 ppm and Cl⁻ 500 ppm.
- Some ink used on pre-printed media may contain ingredients which shorten the print head's product life. Do not use labels pre-printed with ink which contain hard substances such as carbonic calcium (CaCO₃) and kaolin (Al₂O₃, 2SiO₂, 2H₂O).










For further information, contact your local distributor or your media manufacturer.

12. Troubleshooting

WARNING

If a problem cannot be solved by taking the actions described in this chapter, do not attempt to repair the printer. Turn off and unplug the printer. Then contact an authorized Toshiba Tec representative for assistance.

■ Troubleshooting

Symptom	Cause	Solutions
The POWER lamp of the printer does not light when the [POWER] button is pressed.	The power cable is not connected to the AC adapter.	Unplug the power cable from the AC outlet. Connect the power cable to the AC adapter and plug it into the AC outlet.  P.12 “7. Connecting the AC Adapter and Power Cable”
	There is a power failure or the power is not being supplied to the AC outlet.	Check the AC outlet with a power cable from another electric appliance. If the power is not being supplied, ask your electrician or electricity supplier.
	The fuse of the building has blown or the circuit breaker has tripped.	Check the fuse or the circuit breaker.
	The AC adapter connector is disconnected from the power jack.	Unplug the power cable from the AC outlet. Connect the AC adapter connector to the power jack and plug the power cable to the AC outlet.  P.12 “7. Connecting the AC Adapter and Power Cable”
Media is not issued.	The media is not loaded correctly.	Reload the media correctly.  P.15 “10. Loading the Media”
	The interface cable is not connected correctly.	Reconnect the interface cable.  P.11 “6. Connecting the Cables”
	The media sensors are dirty.	Clean the media sensors.  P.17 “11. Maintenance”
Nothing is printed.	Even if the direct thermal mode is selected, the direct thermal media is not loaded.	Load a direct thermal media.  P.15 “10. Loading the Media”
	The media is not loaded correctly.	Reload the media correctly.  P.15 “10. Loading the Media”
	Print data are not sent from the host computer.	Send the print data.
Poor printing	Toshiba Tec Corporation approved media is not used.	Replace the media with the approved one.
	The print head is dirty.	Clean the print head.  P.17 “11. Maintenance”
Missing dots	The print head is dirty.	Clean the print head.  P.17 “11. Maintenance”
	Some print head parts are broken.	When missing dots affect the printout, turn off the printer and ask your Toshiba Tec representative to replace the print head.
Printing is done intermittently.	This will occur in order to cool down a print head whose temperature has become heated during a long-time continuous printing sequence.	Continue to use the printer in this condition. There is no problem in the life and safety of the printer.

Symptom	Cause	Solutions
Media jamming occurs immediately after printing has started.	If the printer is left for a long time without any printing being performed, media jamming may occur between the label and the platen roller.	When the printer will not be used for a long time, pull the lock release lever toward you to unlock the top cover so that no pressure is applied to the label.
Media jamming occurs in continuous printing.	If the print head becomes warm during continuous printing, it is difficult for the label to come off from the platen roller.	Select a lower printing speed. Increase the printing interval.
Barcodes or 2D codes are not readable correctly.	This symptom might happen depending on paper characteristics.	Increase the module size. Select a lower printing speed. Change the barcode print orientation for the ladder barcode to the picket fence barcode (rotate 90 degrees). Check the scanner settings.
The media is not cut cleanly.	The cutter blade has reached the end of its useful life.	Turn off the printer and ask your Toshiba Tec representative to replace the cutter blade.
A wireless LAN communication error occurs immediately after the printer is turned on.	It will take approx. 10 seconds to enable wireless LAN communication while the ONLINE lamp is being lit.	Turn on the printer. Wait at least 10 seconds after the ONLINE lamp has lit to start the communication.

■ Status lamp

LED lamps will light (ON) or blink corresponding to the printer status.

LED			Printer status
POWER	ONLINE	ERROR	
ON	ON	OFF	Normal - Online mode
ON	Blink	OFF	Normal - Online mode (communicating)
ON	OFF	OFF	1. The top cover is opened in the online mode. 2. Printing is temporarily stopped (paused).
ON	OFF	ON	1. A communication error has occurred. (Only when the RS-232C is used)
			2-1. Media jamming has occurred.
			2-2. The media is not loaded correctly.
			2-3. The media sensors differing from the media to be used are selected.
			2-4. The black mark sensor is not correctly aligned to the black marks on the media.
			2-5. The size of the loaded media differs from that for the specified paper size.
			2-6. The media sensor level is not suitable for the actual media.
			3. Media jamming has occurred in the cutter unit.
			4. No media is left.
			5. Printing or media feeding is attempted while the top cover is opened.
			6. There is a problem in the print head.
			7. The temperature of the print head has exceeded the upper limit.
			8. An error has occurred during writing into the flash ROM.
			9. An error has occurred during initialization of the flash ROM.
			10. Saving has failed due to the flash ROM having insufficient blank space.
			11. An improper command such as a print command has been received while the firmware is being upgraded in the download mode.

LED			Printer status
POWER	ONLINE	ERROR	
ON	OFF	ON	12. When any abnormal operations as below are performed, a system error occurs. (a) Command fetch from an odd address. (b) Access to the word data from a place other than the boundary of the word data. (c) Access to the long word data from a place other than the boundary of the long word data. (d) Access to the area of 80000000H to FFFFFFFFH in the logic space in the user system mode. (e) Undefined command placed in other than the delay slot has been decoded. (f) Undefined command in the delay slot has been decoded. (g) Command to rewrite the delay slot has been decoded.

■ Removing jammed media

CAUTION

Do not use any tool that may damage the print head.

When media jamming occurs, please remove jammed media from the printer as following procedure.

- 1 Turn the power off.**
- 2 Open the top cover and remove the media roll.**
- 3 Remove the jammed media from the printer. DO NOT USE any sharp implements or tools as these could damage the printer.**
- 4 Clean the print head and platen, then remove any further dust or foreign substances.**
- 5 Load the media again, and close the top cover.**

13. Printer Specifications

This chapter describes the printer specifications.

Printer

The following table shows the printer specifications.

Item		BV420D-GL02-QM-S
Supply voltage		DC +24V, 2.5A (External AC adapter)
Power consumption		
	During a print job	60 W
	During standby	4.4 W (without options)
Operating temperature range		5°C to 35°C (41°F to 95°F)
Storage temperature range		-20°C to 60°C (-4°F to 140°F)
Relative humidity		25% to 85% RH (no condensation)
Humidity for storage		10% to 90% RH (no condensation)
Resolution		203 dpi (8-dot/mm)
Printing method		Direct thermal
Issue mode		Cut
Printing speed		50.8 mm/sec. (2"/sec.), 76.2 mm/sec. (3"/sec.), 101.6 mm/sec. (4"/sec.), 127 mm/sec. (5"/sec.), 152.4 mm/sec. (6"/sec.), 177.8 mm/sec. (7"/sec.)
Available media width (including backing paper)		32mm (1.26") to 102mm (4.0")
Effective print width (max.)		99.0 mm (3.9")
Dimension (W x D x H)		169 mm x 250 mm x 173 mm (6.66" x 9.84" x 6.81") (excluding projecting parts) 174 mm x 288 mm x 173 mm (6.85" x 11.34" x 6.81") (including projecting parts)
Weight		2.6 kg (5.7 lb)
Available barcode types		UPC-A, UPC-E, EAN8/13, UPC-A add on 2&5, UPC-E add 2&5, EAN-8/13 add on 2&5, Code39, Code93, Code128, EAN128, NW7, MSI, Industrial 2 of 5, ITF, POSTNET, RM4SCC, KIX-code, GS1 Databar, USPS Intelligent mail barcode
Available two-dimensional code		Data Matrix, PDF417, QR Code, Maxi Code, Micro PDF417, Micro QR, GS1 Data Matrix, Aztec Code
Available font		Bitmap: 21 types, Outline: 7 types, Writable characters: 132 types, Optional TTF: 20 types, Chinese-simp 24x24, OTF(CJK)
Rotations		0°, 90°, 180°, 270°
Standard interface		USB 2.0 Hi-speed Ethernet interface (10BASE-T, 100BASE-TX)
Option interface		Serial interface (RS-232C) Wireless LAN interface (IEEE802.11a/b/g/n) Bluetooth interface (Ver.2.1+EDR)

Note

- Data Matrix™ is a trademark of International Data Matrix Inc., U.S.
- PDF417™ is a trademark of Symbol Technologies Inc., US.
- QR Code is a trademark of DENSO CORPORATION.
- Maxi Code is a trademark of United Parcel Service of America, Inc., U.S.
- Bluetooth® is a registered trademark owned by Bluetooth SIG, Inc.

■ Options

Note

The following options are available from your nearest Toshiba Tec Corporation representative or Toshiba Tec Corporation Head Quarters.

Option Name	Type	Description
Wireless LAN interface kit	BV700-WLAN-QM-S	This interface kit enables wireless LAN (WLAN) communication.
Bluetooth interface kit	BV700-BLTH-QM-S	This interface kit enables Bluetooth communication.
Serial (RS-232C) I/F board	BV700-RS-QM-S	This interface kit enables Serial (RS-232C) communication.
AC adapter cover (Black)	BV924-ACD-QM-S	Attached to the printer bottom for housing the AC adapter

14. Media Specifications


This chapter describes the media specifications.

Media

Make sure that the media to be used is approved by Toshiba Tec Corporation. The warranties do not apply to problems caused by using media that is not approved by Toshiba Tec Corporation.
For information regarding Toshiba Tec Corporation-approved media, contact your Toshiba Tec authorized representative.

Media type

The table below shows the size and shape of the media that can be used on this printer.

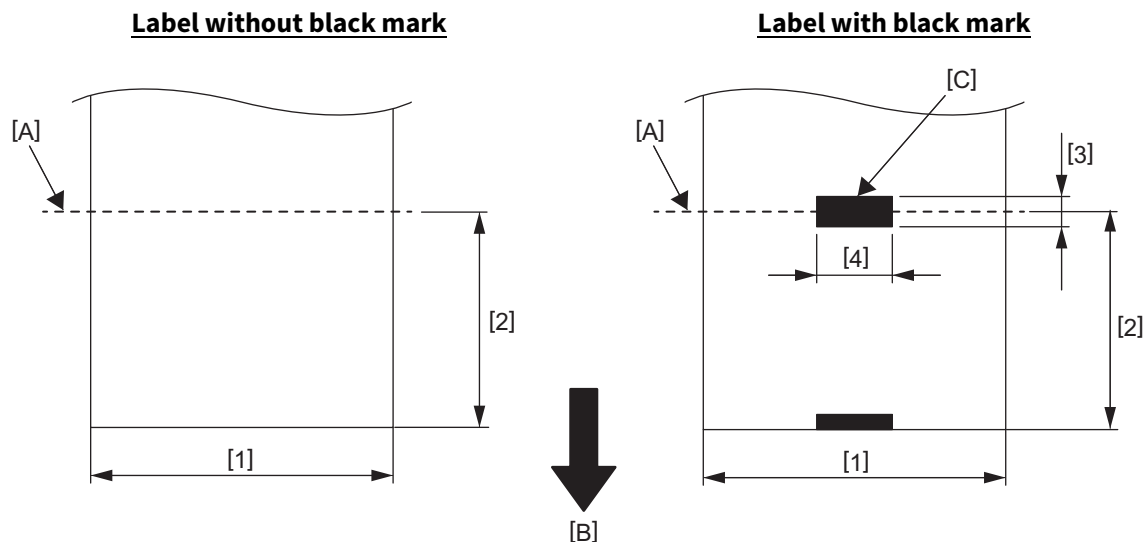

[A]: Cut position

[B]: Feed direction

[C]: Black mark (on the back side)

Unit: mm (inch)

Item	Issue mode	Cut mode
[1] Label width		32.0 to 102.0 (1.26 to 4.0)
[2] Cut length		25.4 to 152.4 (1.0 to 6.0)
[3] Black mark length		6.0 to 10.0 (0.24 to 0.39)
[4] Black mark width		Min. 8.0 (0.32)
Thickness		0.06 to 0.19 (0.0024 to 0.0074)
Max. outer roll diameter		Ø107 (4.2)
Roll direction		Outside wound
Inner core diameter		38.1 (1.5)

Note

1. To ensure print quality and print head life, use only Toshiba Tec Corporation approved media.
2. A label jam is more likely to occur with the approach of label end because labels around the paper core curl intensely.

Barcode Printer
Owner's Manual
BV420D-GL02-QM-S

Toshiba Tec Corporation

1-11-1, OSAKI, SHINAGAWA-KU, TOKYO, 141-8562, JAPAN

© 2020 - 2023 Toshiba Tec Corporation All rights reserved



Printed in Indonesia
BU220055A0-EN
R230420A5601-TTEC
Ver0050